


## SLIDE


> Notice d'installation

Décliné en  
**27**  
dimensions




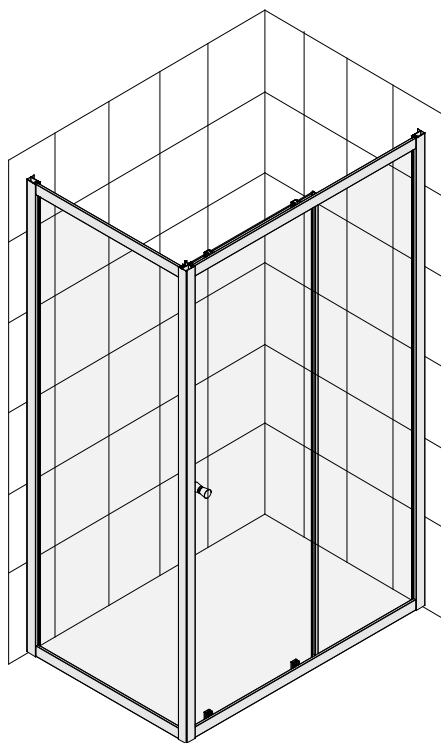


Installation en angle à droite  
Porte coulissante côté gauche

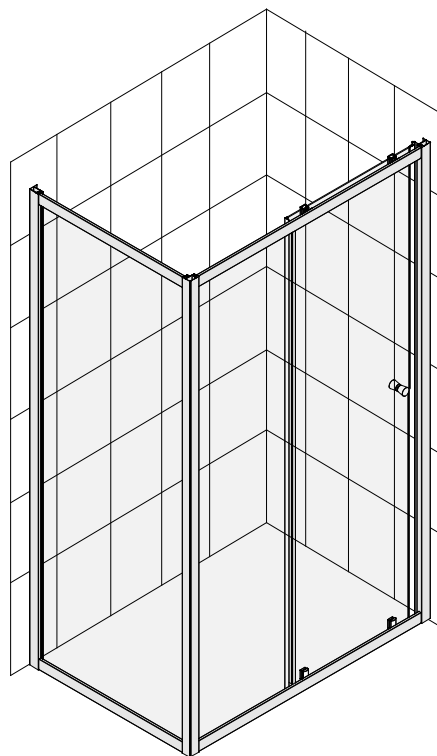





Installation en angle à droite  
Porte coulissante côté droit


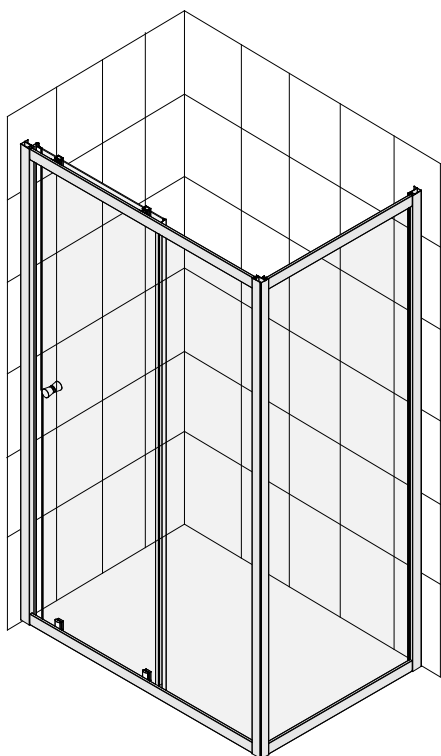


Installation en angle à gauche  
Porte coulissante côté gauche


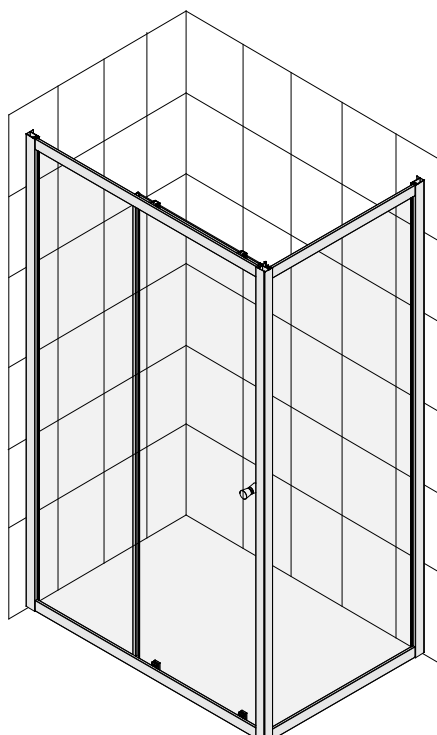



Installation en angle à gauche  
Porte coulissante côté droit

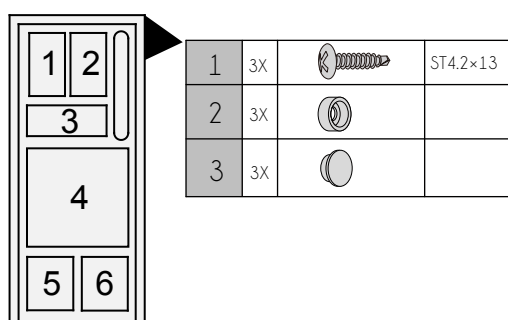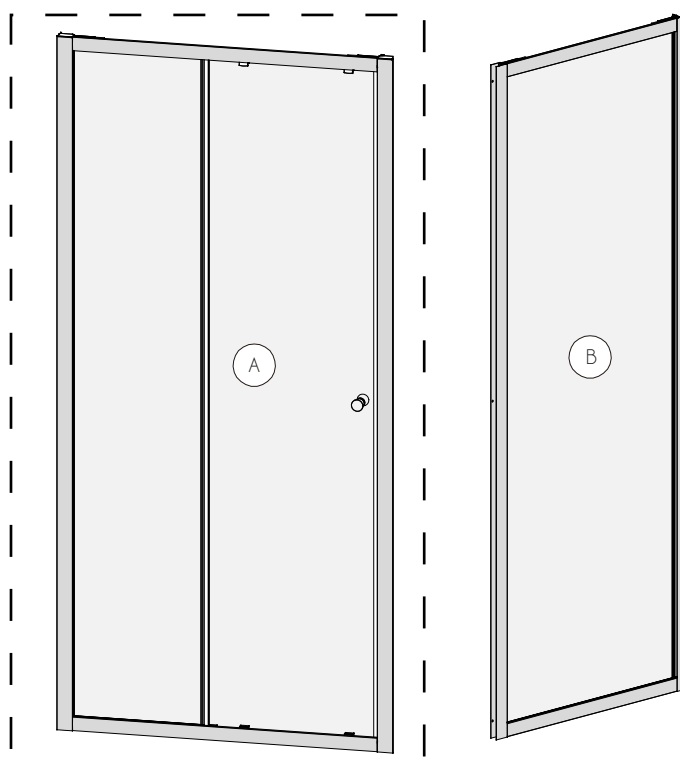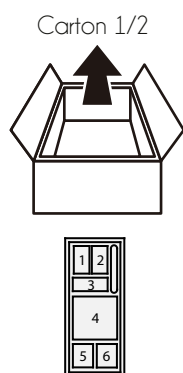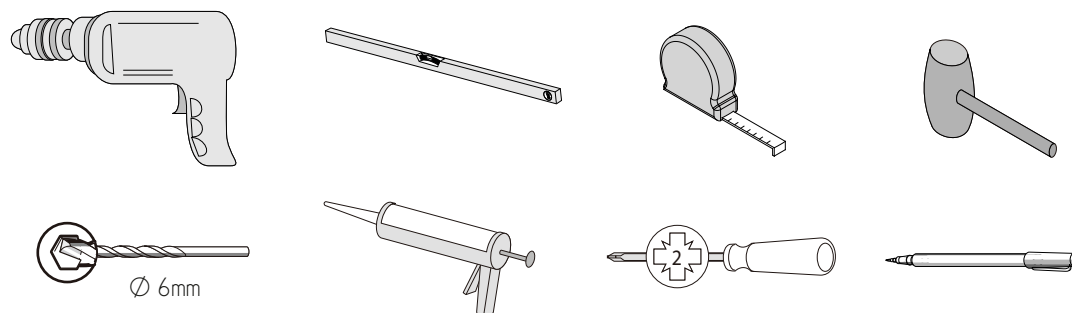

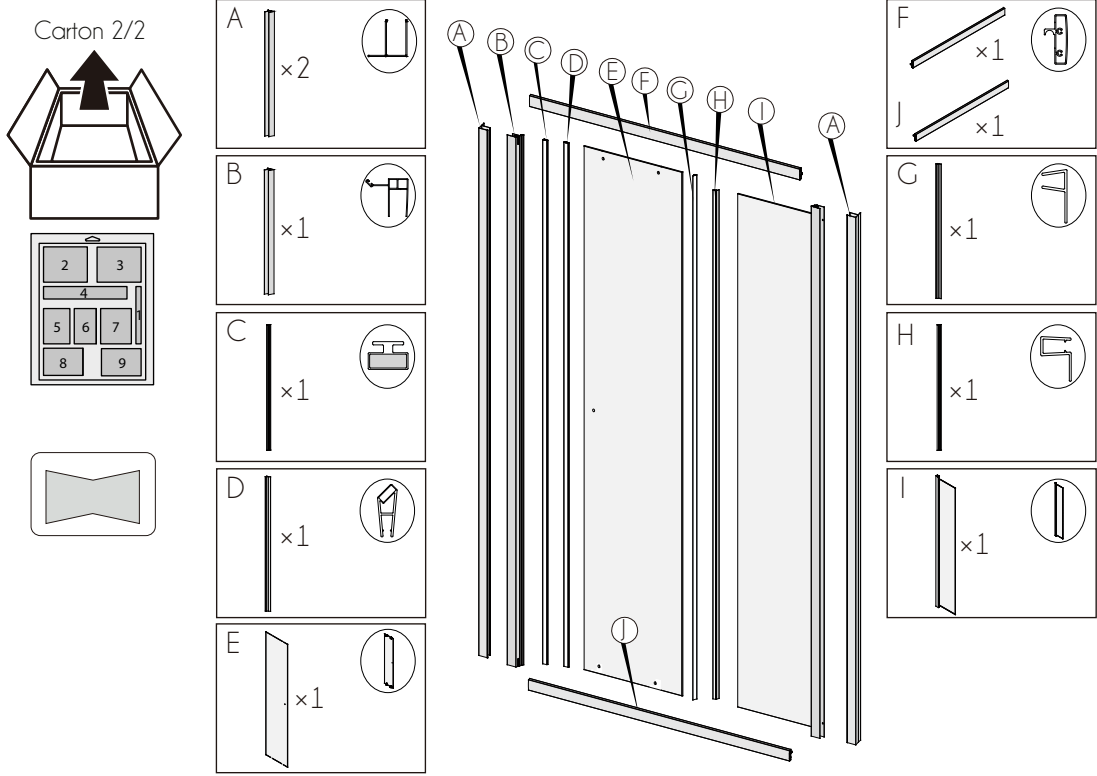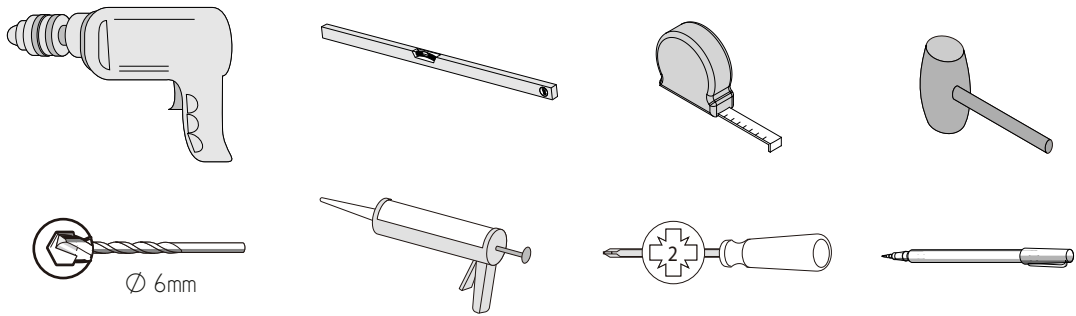


|   |     |  |          |
|---|-----|--|----------|
| 1 |     |  |          |
| 2 | 2X  |  |          |
| 3 | 14X |  |          |
| 4 | 2X  |  | ST3.5x12 |
| 5 | 14X |  |          |
| 6 | 6X  |  | ST4.2x13 |
| 7 | 8X  |  | ST4x30   |
| 8 | 8X  |  | ST4x30   |
| 9 | 8X  |  |          |

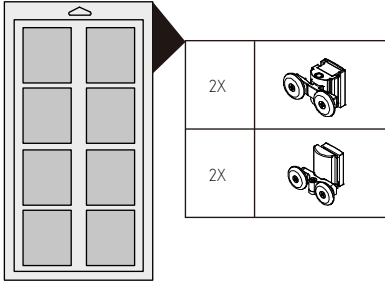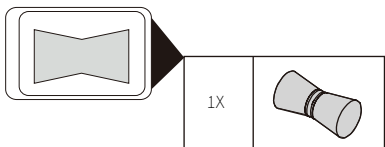

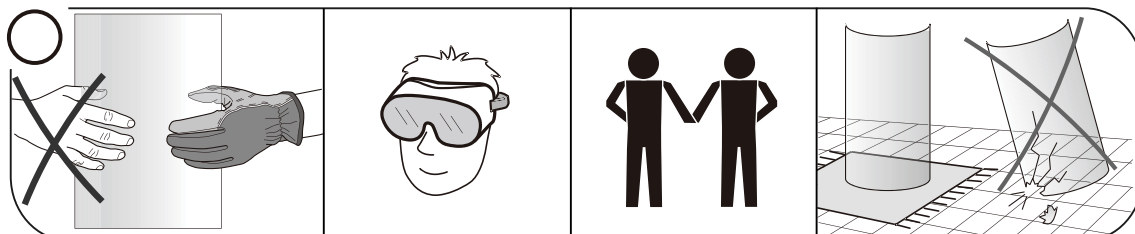

Il est obligatoire de porter des protections (gants et lunettes)  
L'installation des parois ne peut se faire qu'à 2 personnes  
Ne jamais faire reposer une paroi en verre sur un angle




| Dimensions en mm      | Mini       | Maxi        |
|-----------------------|------------|-------------|
| 800 x 1000 x 2000(h)  | 780 x 970  | 800 x 990   |
| 800 x 1100 x 2000(h)  | 780 x 1070 | 800 x 1090  |
| 800 x 1200 x 2000(h)  | 780 x 1170 | 800 x 1190  |
| 800 x 1300 x 2000(h)  | 780 x 1270 | 800 x 1290  |
| 800 x 1400 x 2000(h)  | 780 x 1370 | 800 x 1390  |
| 800 x 1500 x 2000(h)  | 780 x 1470 | 800 x 1490  |
| 800 x 1600 x 2000(h)  | 780 x 1570 | 800 x 1590  |
| 800 x 1700 x 2000(h)  | 780 x 1670 | 800 x 1690  |
| 800 x 1800 x 2000(h)  | 780 x 1770 | 800 x 1790  |
|                       |            |             |
| 900 x 1000 x 2000(h)  | 880 x 970  | 900 x 990   |
| 900 x 1100 x 2000(h)  | 880 x 1070 | 900 x 1090  |
| 900 x 1200 x 2000(h)  | 880 x 1170 | 900 x 1190  |
| 900 x 1300 x 2000(h)  | 880 x 1270 | 900 x 1290  |
| 900 x 1400 x 2000(h)  | 880 x 1370 | 900 x 1390  |
| 900 x 1500 x 2000(h)  | 880 x 1470 | 900 x 1490  |
| 900 x 1600 x 2000(h)  | 880 x 1570 | 900 x 1590  |
| 900 x 1700 x 2000(h)  | 880 x 1670 | 900 x 1690  |
| 900 x 1800 x 2000(h)  | 880 x 1770 | 900 x 1790  |
|                       |            |             |
| 1000 x 1000 x 2000(h) | 980 x 970  | 1000 x 990  |
| 1000 x 1100 x 2000(h) | 980 x 1070 | 1000 x 1090 |
| 1000 x 1200 x 2000(h) | 980 x 1170 | 1000 x 1190 |
| 1000 x 1300 x 2000(h) | 980 x 1270 | 1000 x 1290 |
| 1000 x 1400 x 2000(h) | 980 x 1370 | 1000 x 1390 |
| 1000 x 1500 x 2000(h) | 980 x 1470 | 1000 x 1490 |
| 1000 x 1600 x 2000(h) | 980 x 1570 | 1000 x 1590 |
| 1000 x 1700 x 2000(h) | 980 x 1670 | 1000 x 1690 |
| 1000 x 1800 x 2000(h) | 980 x 1770 | 1000 x 1790 |

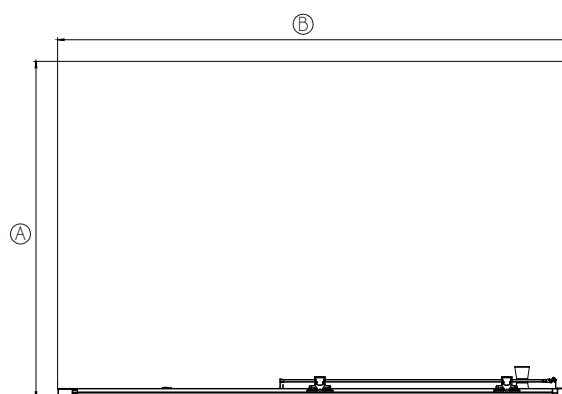

Ⓐ Dimensions de la paroi de retour :  
800 / 900 / 1000






Ⓑ Dimensions de la paroi de façade :  
1000 / 1100 / 1200 / 1300 / 1400  
1500 / 1600 / 1700 / 1800

1

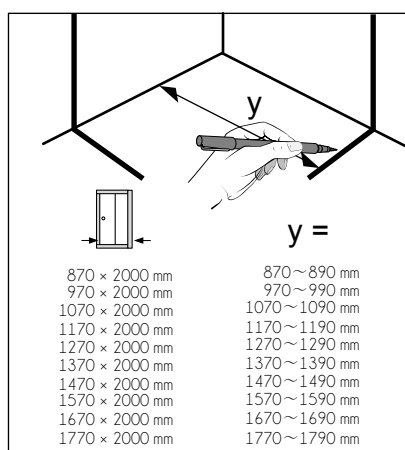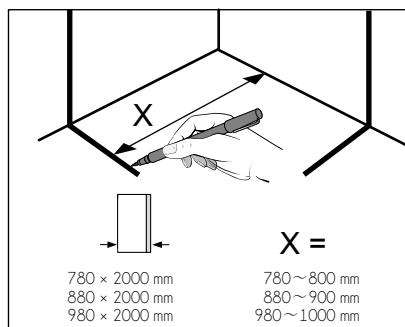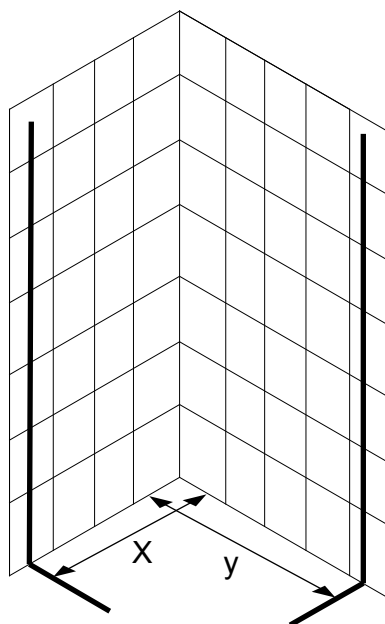


2


Carton 2/2

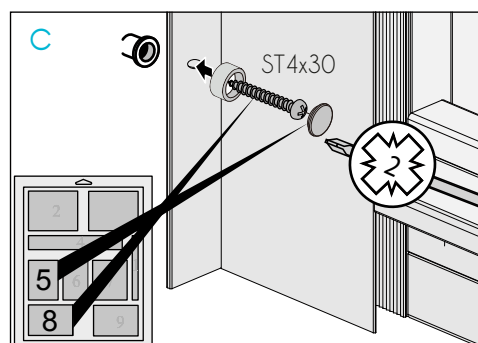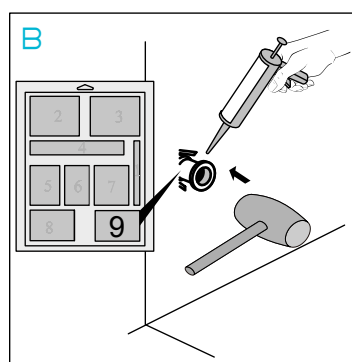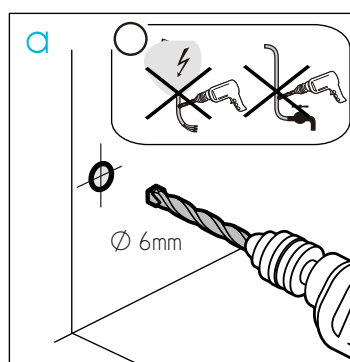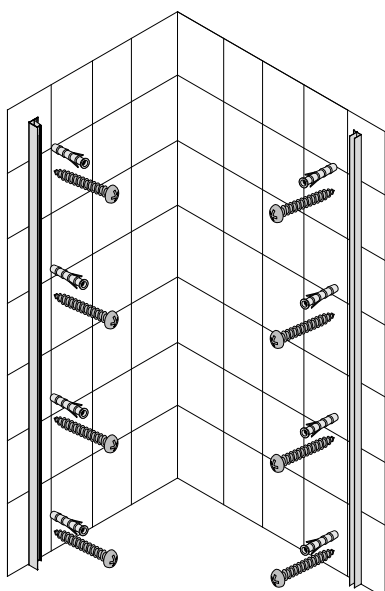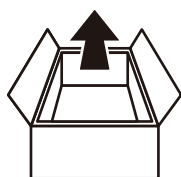


3

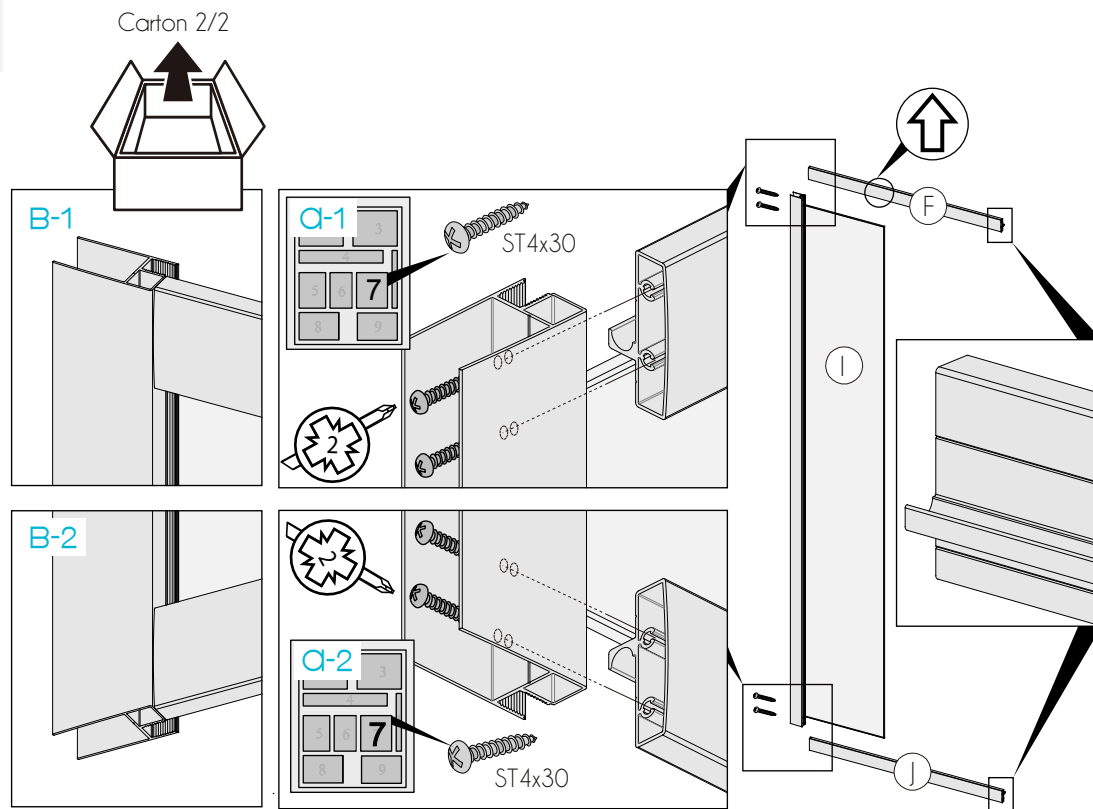


4

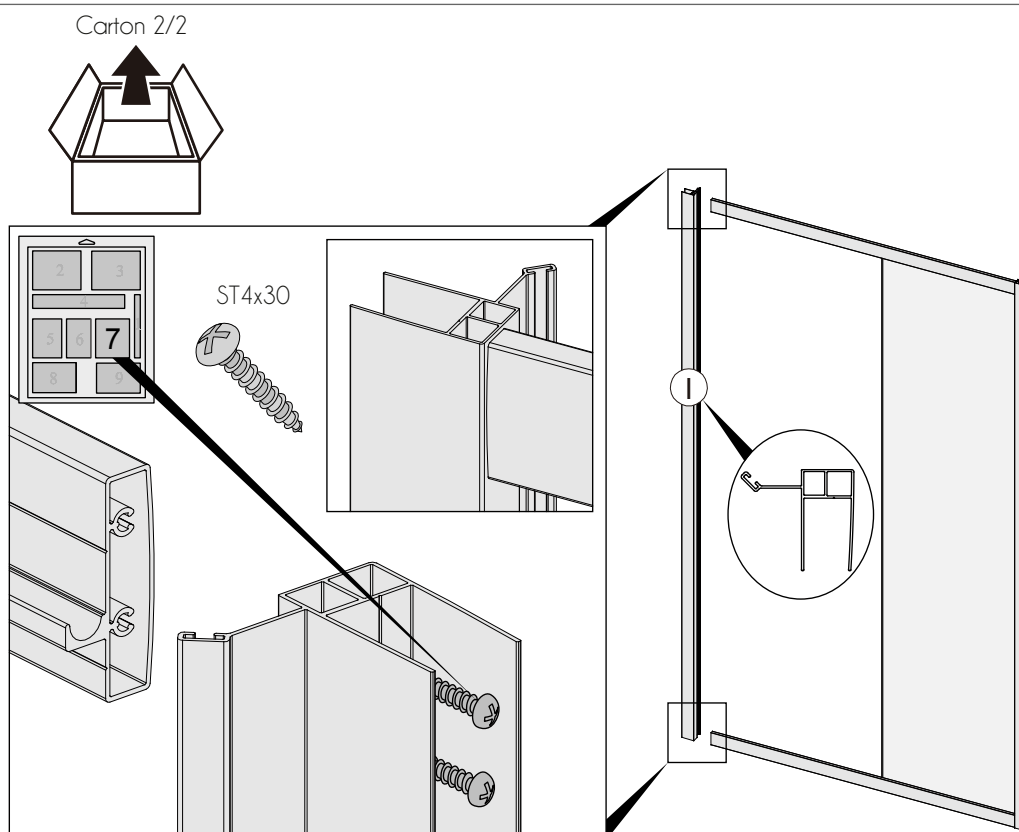

5

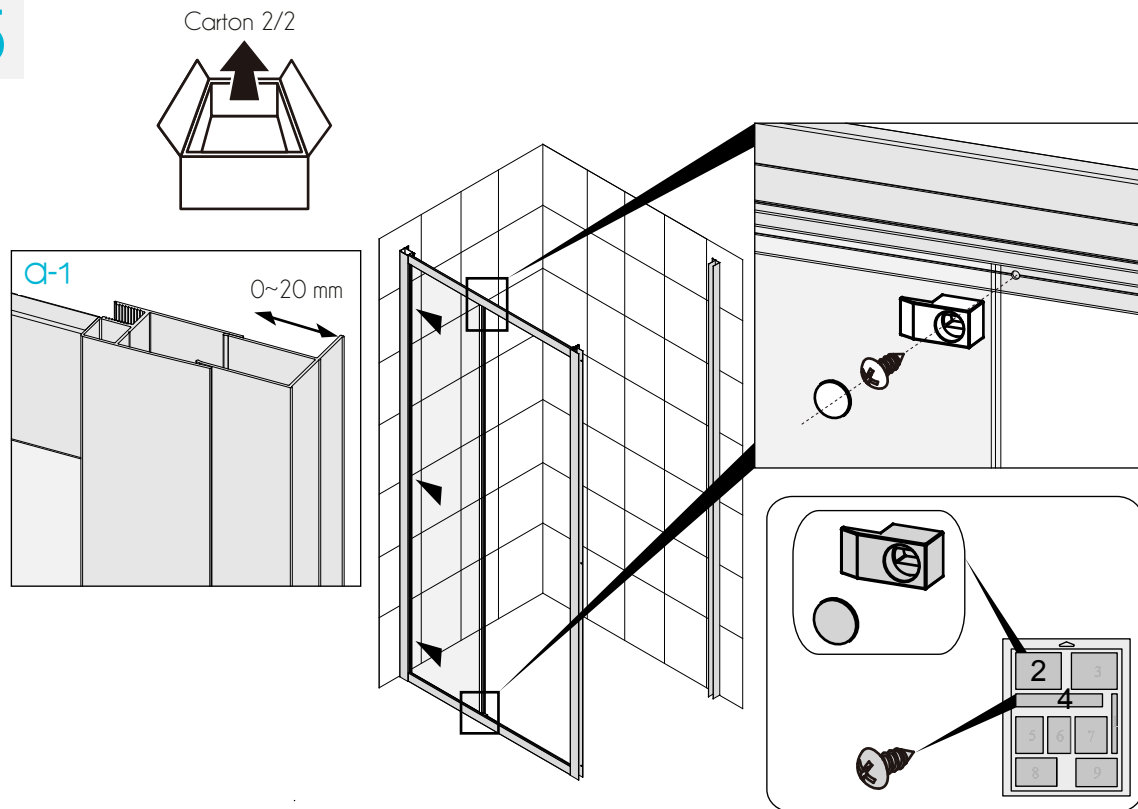


6

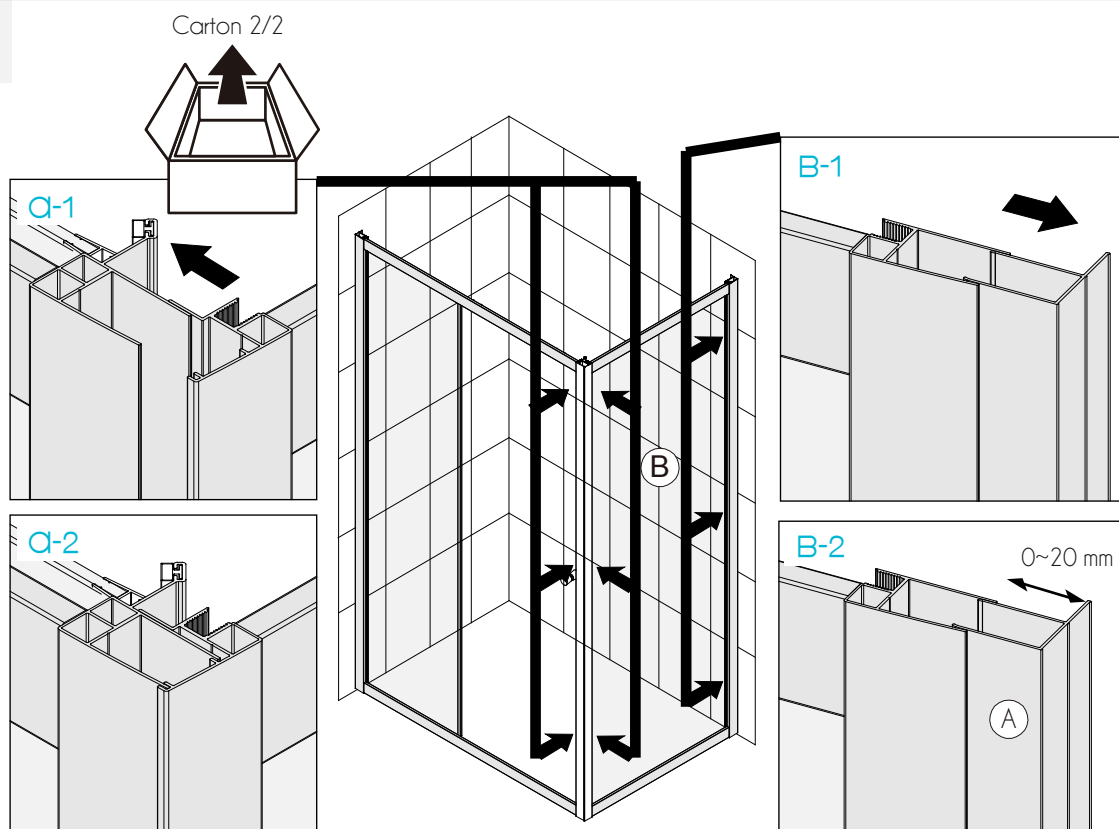




Technical diagrams for the installation of the 1000 Series door lock. The diagrams show the lock components and the door panel. The lock is shown in two states: 'A-1' (locked) and 'A-2' (unlocked). The door panel is shown with the lock installed, with the lock body labeled 'B-1' and the lock handle labeled 'B-2'. The diagrams also show the lock body being inserted into the door panel, with the lock handle being attached to the lock body. The diagrams are labeled with 'A-1', 'A-2', 'B-1', and 'B-2'.


8a

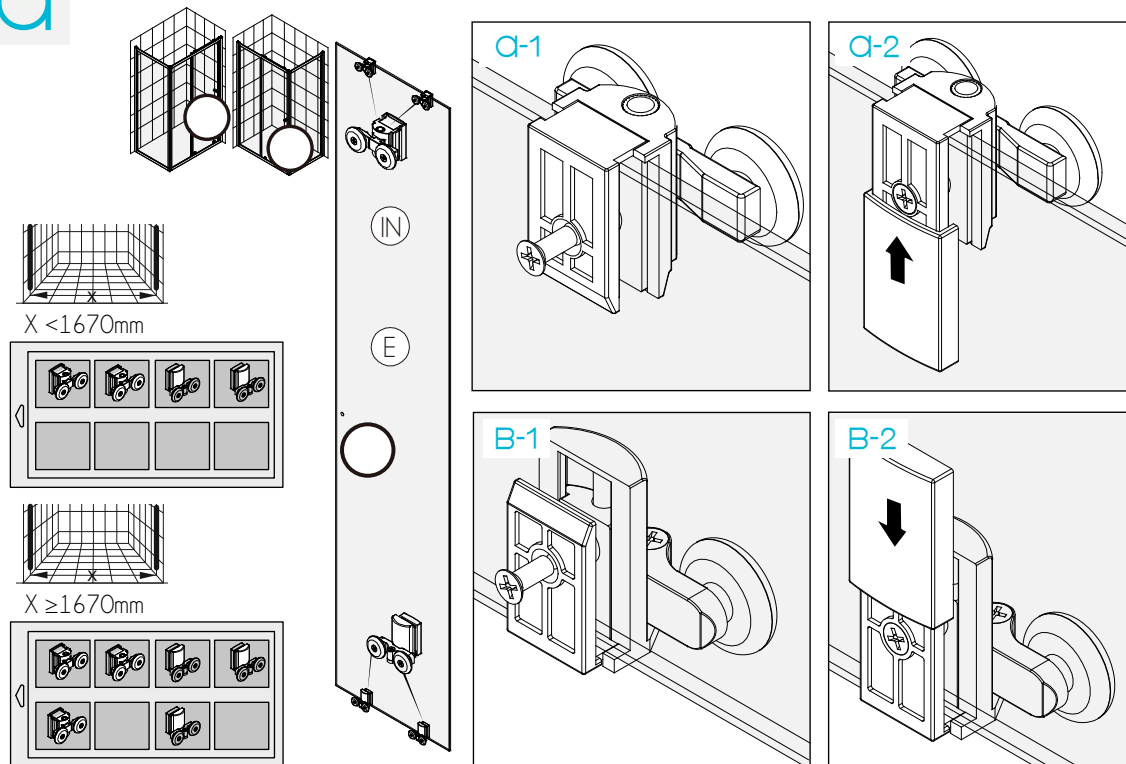


9

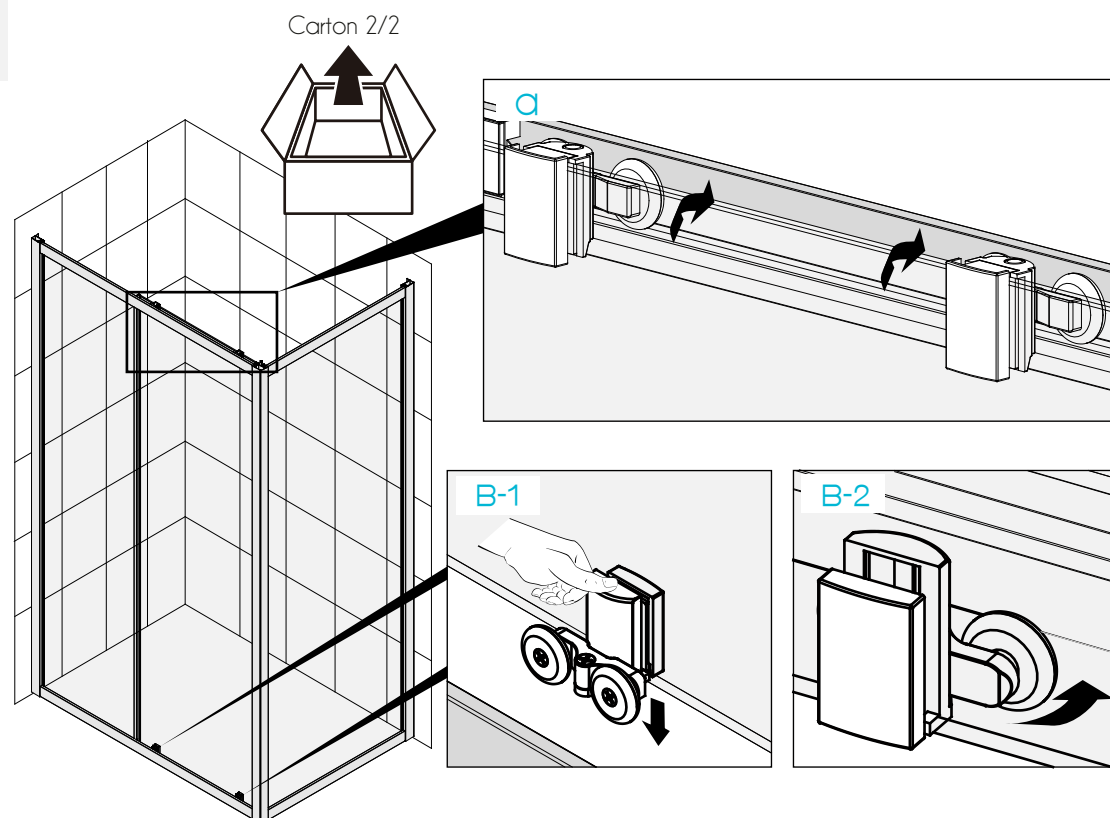


10

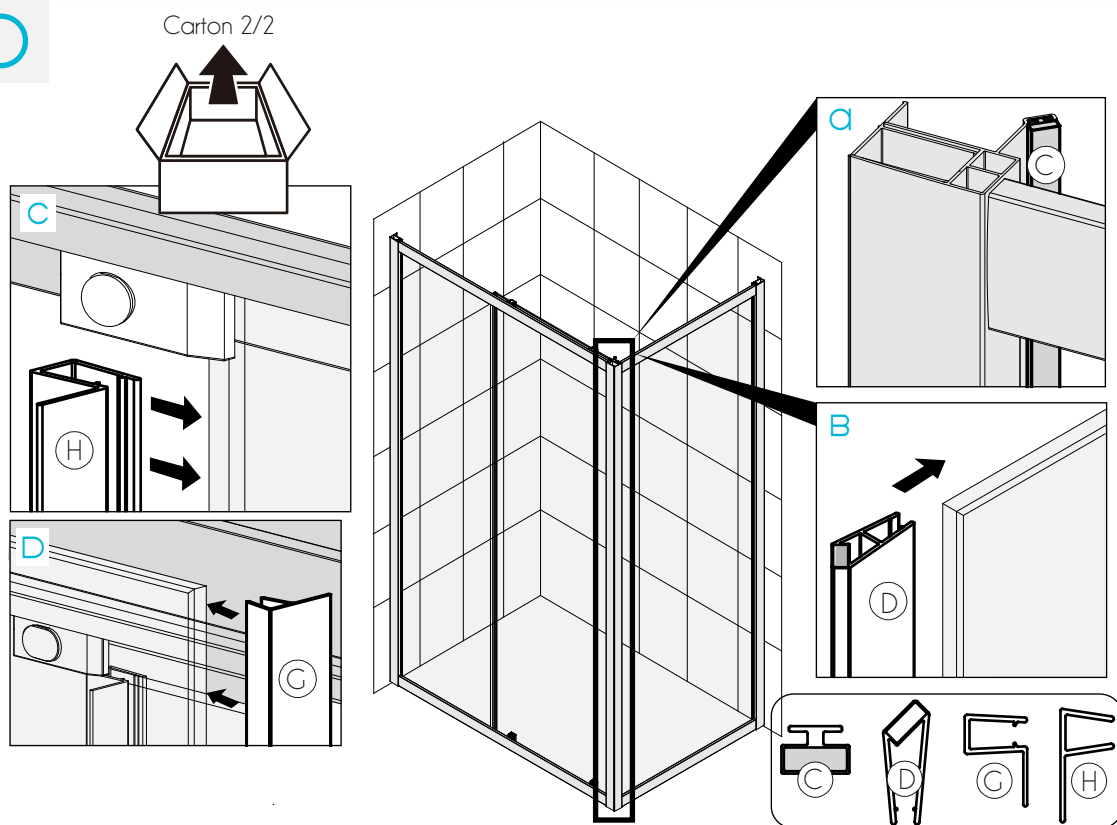

11

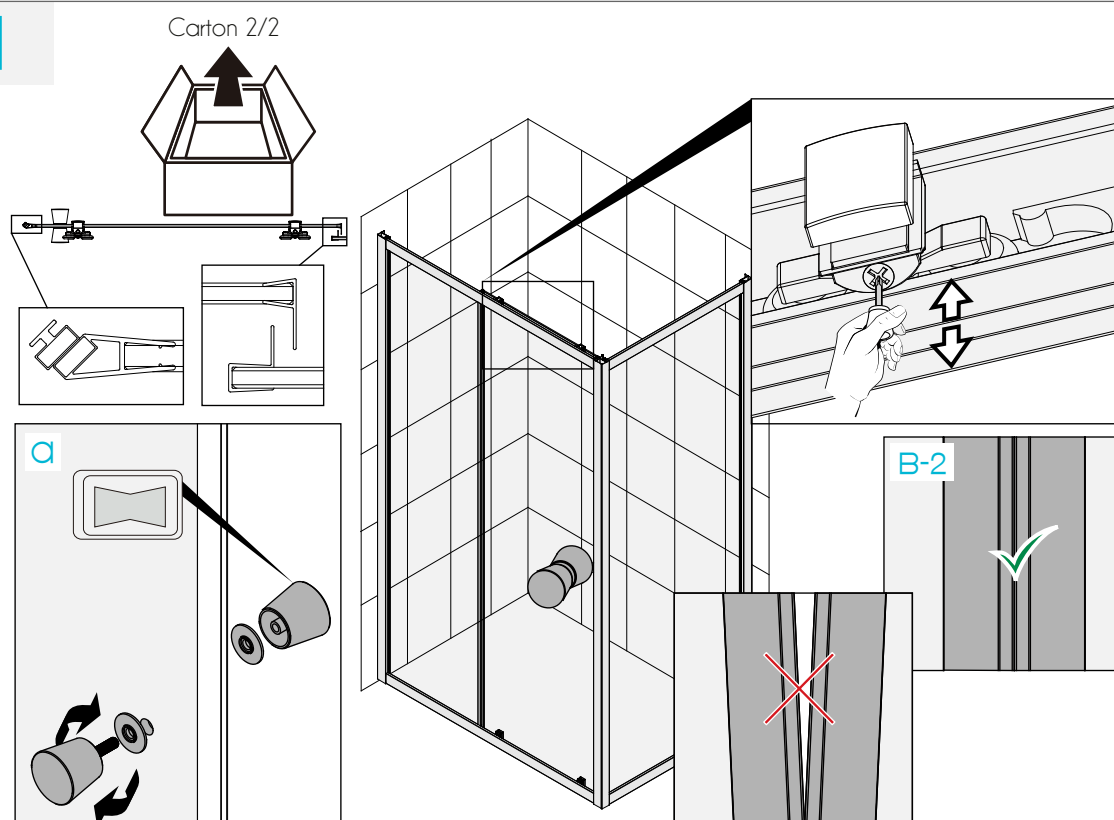

12

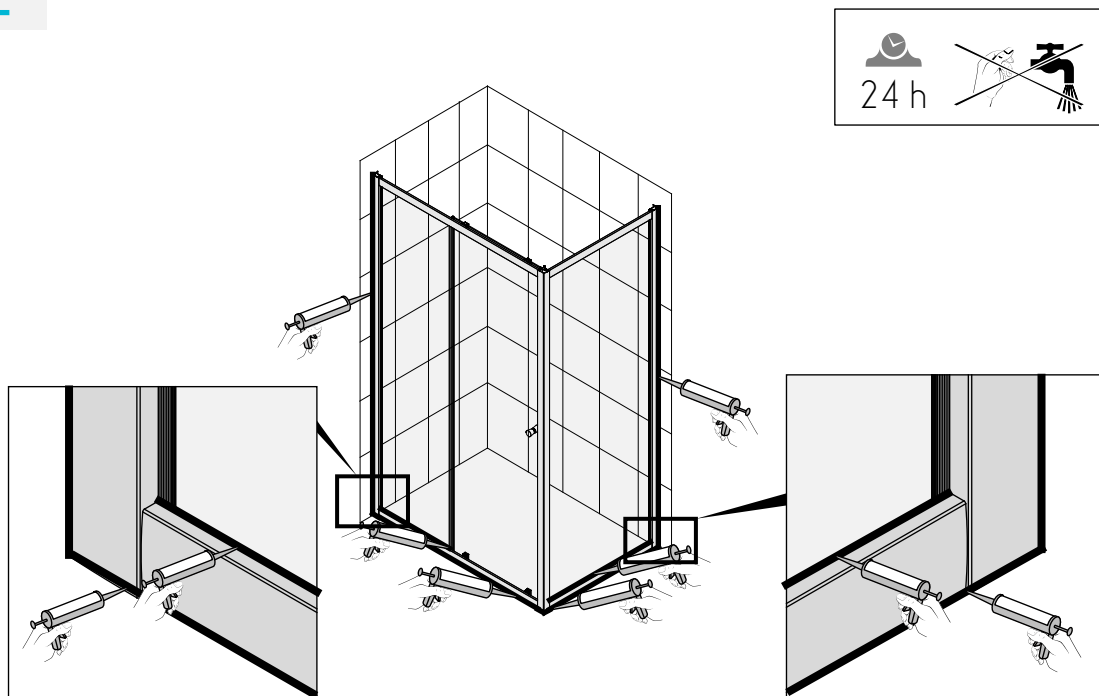

13

Ne pas siliconer la base des montants de fixation murale sur 5 cm.  
Laisser sécher au moins 24h avant d'utiliser la douche.

